


TOP 10 TIPS


...best practice door installation tips



1 Ensure product is stored inside a dry cool place. **Do not store in a container or under a tarpaulin.**

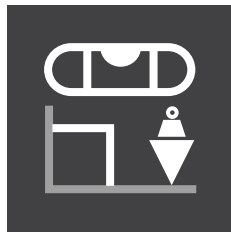

3 Make sure the opening has been formed correctly, square and the floor surface is level.

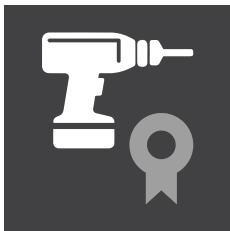


2 Familiarise yourself with the product. Look at the installation instructions including the fire certification.




4 Ensure the product is installed at the correct build stage, after all wet trades have finished and the building is watertight.




5 Check the frame is adjusted by trimming the jambs to suit the required undercut.

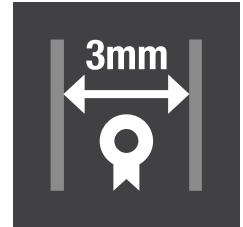


8 All gaps between door and frames should be 3mm, (4mm maximum) refer to certification.

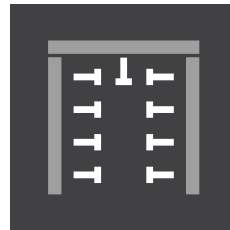


6 Between 9 to 11 fixings are used per door set. 4 to 5 fixing approximately per jamb and 1 in the head.

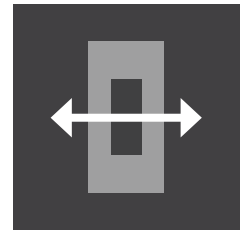

9 Adjust doorstop/ keep to eliminate any door rattle or light gaps.

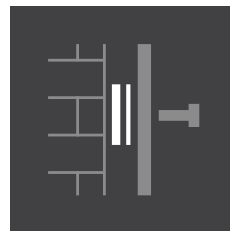

7 Make sure packers are located at all fixing points and behind all hinges.

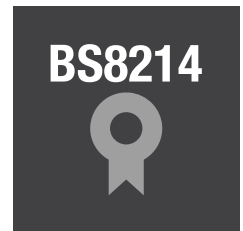

10 Only use the specified gap filling material to seal between the frame and partition, refer to BS8214 for guidance.



Scan the QR code for our
Door Installation Guide or
visit www.stairways.co.uk